

Mustang BeltMinder Deactivation/Activation

Before beginning procedure (Steps 1-9), ensure that the following conditions are met:

- The parking brake is set.
- The gear shift is in neutral (manual transmission) or Park (automatic transmission).
- The ignition switch is off.
- All vehicle doors are closed.
- The driver's safety belt is unbuckled.
- The parklamps/headlamps are off.

BeltMinder activation and deactivation procedure

1. Turn the ignition switch to the RUN (or ON) position. DO NOT START ENGINE.
2. Wait until the safety belt warning light turns off (approximately 1-2 minutes).
 - Steps 3-5 must be accomplished within 60 seconds!
3. Buckle then unbuckle safety belt three times, ending with the belt buckled. This can be done before or during BeltMinder warning activation.
4. Turn the parklamps/headlamps on then off.
5. Buckle then unbuckle the safety belt three times, ending with the belt unbuckled.
 - The safety belt warning light will turn ON for three seconds.
6. Within seven seconds of the safety belt warning light turning OFF, buckle then unbuckle the safety belt.
 - This will disable BeltMinder if currently enabled, or enable BeltMinder if currently disabled.
7. Confirmation of disabling BeltMinder is provided by the safety belt warning light flashing four times per second for three seconds.
8. Confirmation of enabling BeltMinder is provided by:
 - The safety belt warning light flashing four times per second for three seconds.
 - Followed by three seconds with the safety belt warning light off.
 - Once again, the safety belt warning light will flash four times per second for three seconds.
9. After receiving confirmation, the deactivation/activation procedure is complete.